


THE MOST COMMON MEASUREMENTS FOR OUTLETS AND SWITCHES

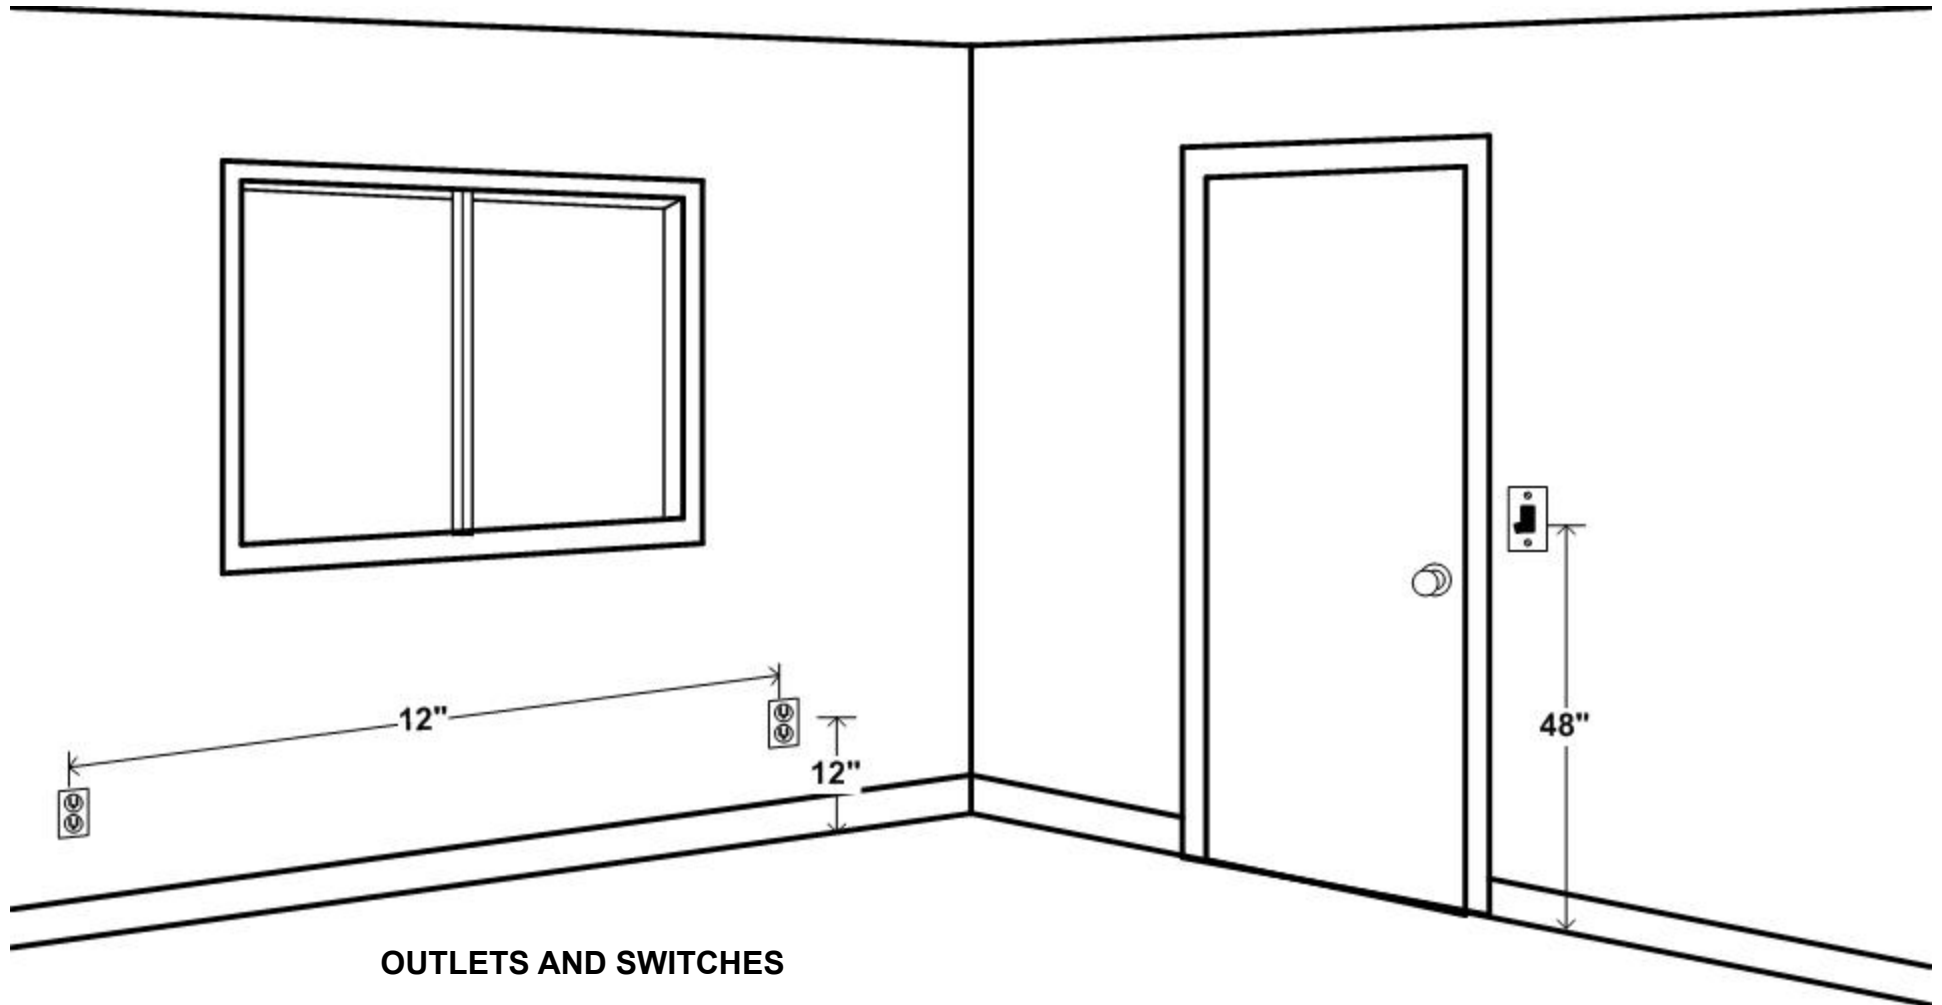

OUTLETS AND SWITCHES

- All outlets must be of the grounded type.
- Outlets should be no more than 12 feet apart.
- Outlets should be 12" high from floor.
- Switches should be 48" high from floor.
- Switches should always be put on same side of door that the door knob is on.

Check on local codes for more information needed on outlets and switches for you wiring project.